



Spreader Settings

SPREADER SETTINGS are approximate and will vary with ground speed pattern, adjustment and changes in the manufacturing of the equipment.

Therefore, you should **ALWAYS** calibrate your spreader before applying any product.

<i>SGN 90-110</i>	<i>1lb. /</i>	<i>2lb. /</i>	<i>3lb. /</i>	<i>4lb. /</i>	<i>5lb. /</i>	<i>6lb. /</i>	<i>7lb. /</i>
<i>Spreader Settings</i>	<i>1000 sq. ft.</i>	<i>1000 sq. ft.</i>	<i>1000 sq. ft.</i>	<i>1000 sq. ft.</i>	<i>1000 sq. ft.</i>	<i>1000 sq. ft.</i>	<i>1000 sq. ft.</i>
ProScape-Prizelawn	E	F	G	H	J	L	N
Bigfoot. bf1/ss							
PennMulch-Prizelawn HVO	E	F	G	H	J	L	N
Cyclone	-	2	2 ½	3	4	4 ½	5
Earthway Rotary	8	10	11	12	14	15	16
Gandy	18	20	21	22	24	26	28
Jet-Spred II	1 ½	2	3	3 ½	4	4 ½	5
Jet-Spred III	2	2 ½	3	4	4 ½	5	5 ½
Lely HR, 1250,1500,2010	-	2 II	2 ½ II	3 II	4 II	5 II	6 II
Lely W	-	2 II	2 ½ II	3 II	4 II	5 II	6 II
Green's Lesco (letters)	C1	D	E	G	H	I	J
Grade Lesco(numbers)	9	14	15	16	17	18	21
Prizelawn CBR III	E	F	G	H	J	L	N
Prizelawn CBR II	-	1 ½	2	2 ½	4	4 ½	5 ½
Prizelawn LF-1	-	1	1 ½	2	2 ½	3 ½	5 ½
Prizelawn MPR 1	-	1	2	4	5	6	7
Scotts RX7	B	C	F	E	E	G	I

	Scotts Accupro 2000 SR-2000	D	E	F	G	H	K	M
	Scotts R8A/SR1	E	G	H	J	K	L	M
	Scotts AP	E	G	H	J	J	L	M
	Scotts SR2000	E	G	H	J	J	L	M
	Spyker	-	-	1 ½	2	3 ½	4 ½	4 ¾
	Vicon	14	15	16	18	22	24	26
	SGN 140-155	1lb. /	2lb. /	3lb. /	4lb. /	5lb. /	6lb. /	7lb. /
	Spreader Settings	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.
	ProScape- Prizelawn	D	E	J	K	L	N	R
	Bigfoot. bf1/ss							
	PennMulch- Prizelawn HVO	D	E	J	K	L	N	R
	Cyclone	2	3	4	4 ¼	4 ½	5	6
	Earthway Rotary	11	12	14	15	15	16	22
	Gandy	21	22	24	25	26	28	34
	Jet-Spred II	3	3 1/5	4	4 ¼	4 ½	5	6
	Jet-Spred III	3	4	4 ½	5	5	5 ½	6 ½
	Lely HR, 1250,1500,201 0	2 II	3 II	4 II	5 II	5 II	6 II	7 ½ II
	Lely W	2 II	3 II	4 II	5 II	5 II	6 II	7 ½ II
Mid-size	Lesco (letters)	C1	D	H	I	I	J	M
Grade	Lesco(numbers)	8	10	15	16	17	21	26
	Prizelawn CBR III	D	E	J	K	L	N	R
	Prizelawn CBR II	2	2 ½	4	4	4 ½	5 ½	8
	Prizelawn LF-1	1 ½	2	2 ½	3	3 ½	4	6
	Prizelawn MPR 1	1 ½	2	5	3	3 ½	4	6
	Scotts RX7	C1	D	E	F	G	I	M

Scotts Accupro 2000 SR-2000	E	F	H	I	K	M	R
Scotts R8A/SR1	H	I	K	L	L	M	P
Scotts AP	H	I	J	K	L	M	P
Scotts SR2000	H	I	J	K	L	M	P
Spyker	2	3	3 ½	4 ¼	4 ½	4 ¾	6
Vicon	18	20	22	23	24	26	32
SGN 200-220	1lb. /	2lb. /	3lb. /	4lb. /	5lb. /	6lb. /	7lb. /
Spreader Settings	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.	1000 sq. ft.
ProScape- Prizelawn	E	J	L	N	O	P	R
Bigfoot. bf1/ss							
PennMulch- Prizelawn HVO	E	J	L	N	O	P	R
Cyclone	3 ½	4	4 ½	5	5 ½	5 ¾	6
Earthway Rotary	12	14	15	16	18	20	22
Gandy	22	22	28	28	30	32	34
Jet-Spred II	3 ½	4	4 ¼	5	5 ½	5 ¾	6
Jet-Spred III	4	4 ½	5	5 ½	6	6 ¾	6 ½
Lely HR, 1250,1500,201 0	3II	4II	5II	6 II	6 ½ II	7II	7 ½ II
Lely W	3II	4II	5II	6II	6 ½ II	7II	7 ½ II
Lesco (letters)	D	G	I	J	K	L	M
Lesco(numbers)	10	15	17	21	22	24	26
Prizelawn CBR III	E	J	L	N	O	P	R
Prizelawn CBR II	2 ½	4	4 ½	5 ½	6	6 ½	8
Prizelawn LF-1	2	2 ½	3 ½	4	4 ½	5	6
Prizelawn MPR 1	2	2 ½	3 ½	4	4 ½	5	6
Scotts RX7	D	E	G	I	J	L	M

Scotts Accupro 2000 SR-2000	F	H	K	M	N	O	R
Scotts R8A/SR1	I	K	L	M	N	O	P
Scotts AP	I	K	L	M	N	O	P
Scotts SR2000	I	K	L	M	N	O	P
Spyker	3.5	4	4 ½	4 ¾	5 ¼	5 ½	6
LT Rich	5.5	6	6 ½	6 ¾	7 ¼	7 ½	8
Vicon	20	22	24	26	30	31	32